



- Drill driver
- Construction clamps
- 5 1/8 inch structural screws
- Optional, drill bit to pre drill holes



- Long-nosed tin snips
- Galvanized or stainless steel gopher wire or hardware cloth. Purchase a roll that is the same width as your beds (2, 3, or 4ft) to avoid extra cutting




Tools & Hardware

Staple Gun or 2 inch nails to secure gopher wire to bottom of bed



3 ft x 8 ft Garden Beds: Lumber is Pre Cut - Build on Flat Surface - Pre-Drill Holes before driving 5 1/8in Lag Bolts - Use Construction Clamps to secure 4x4 to 2x12 for Strong Fastening - Make sure beds end up the width of your gopher wire.

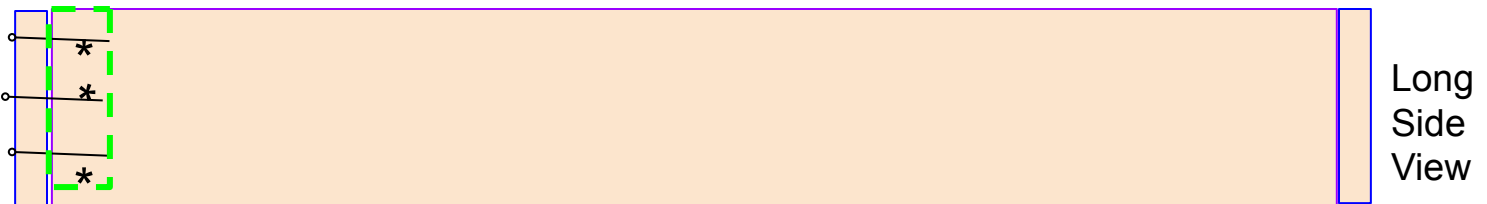

After bed is constructed, cut gopher wire with long-nosed tin snips, secure to bottom of box by driving a nail in half way and then bending over to secure the wire.



Tips & Suggestions

Ideally, have wood pre-cut

Assemble beds on a flat surface.

Use construction clamps to ensure strong fastening

